



1. This tutorial assumes that you have already used the other tutorial on layering multiple colors of vinyl, and that you have cut your finished piece with alignment triangles. IF you haven't, we HIGHLY recommend that you visit our other tutorial, and put alignment triangles on your page prior to cutting, as these are very helpful in hanging your project as well as lining up the layers of colored vinyl.
2. Once you have completely cut your project, you will first need to prep your wall. It works best on a smooth surface that has been well cleaned. If you wiped down the wall with a wet cloth first, make sure it is completely dry before applying. I recommend letting the surface dry a good hour prior to application. IF your wall is newly painted, we recommend that you not hang the wall vinyl up for a minimum of 30 days after painting. The wall paint really needs a good month to cure on your wall! If you hang it too soon, then most likely, when you go to remove the vinyl from the surface of the wall, you will peel your paint with it, so it's important that you give the paint proper time to settle.
3. Once your surface is clean, use a ruler and pencil, and make a light pencil mark on your wall, marking a straight line. It needs to be marked "at least" as long as your project is. On this tutorial, I did my marking a little darker, for the purposes of taking photos, but I highly recommend you make this marking as light as possible, especially on a flat based painted surface.

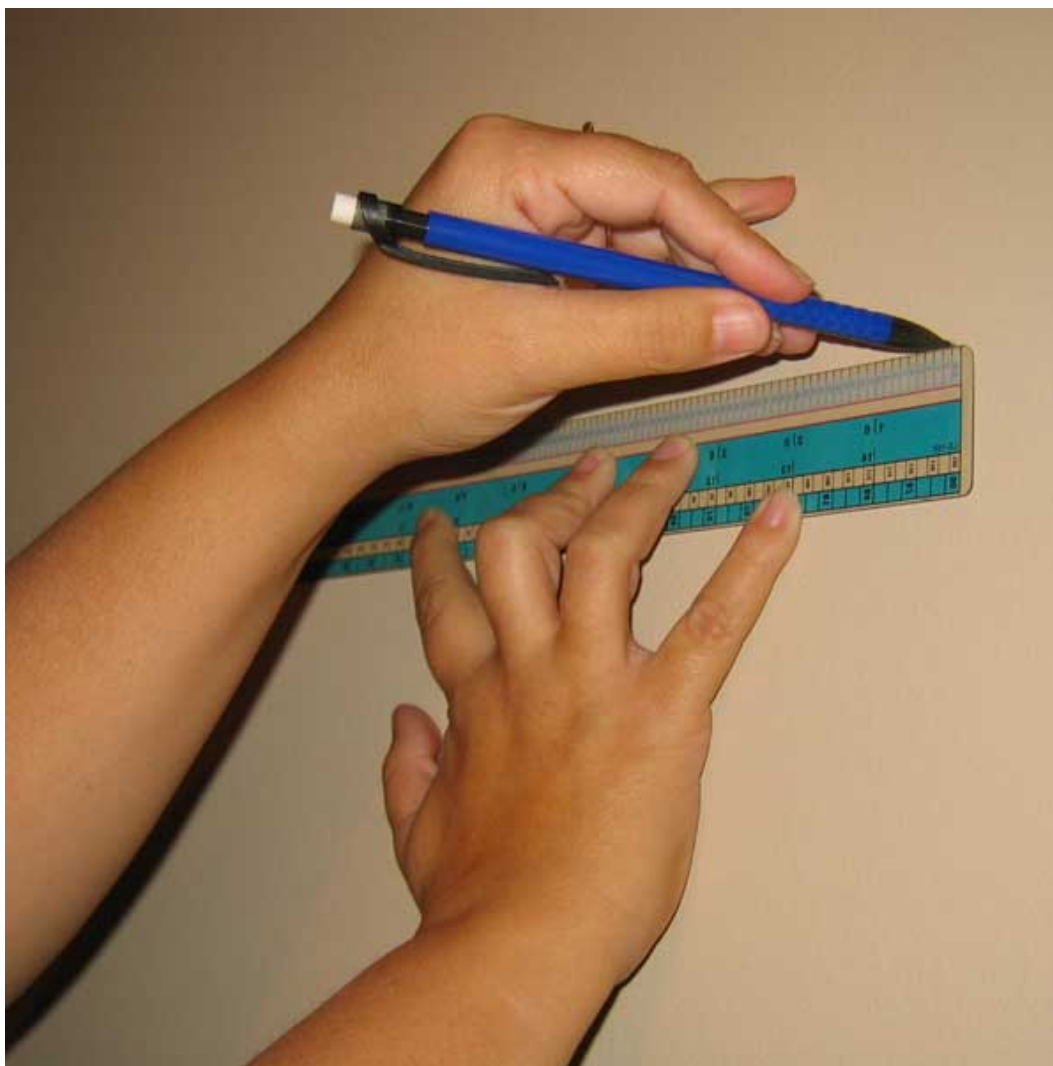

4. Peel the top of the transfer tape away from the backing. You want to peel it back so that all the triangles are released from the backing.



5. Take your backing, and fold it back, away, so that you can easily grab it and slide it away from the top layer as needed.

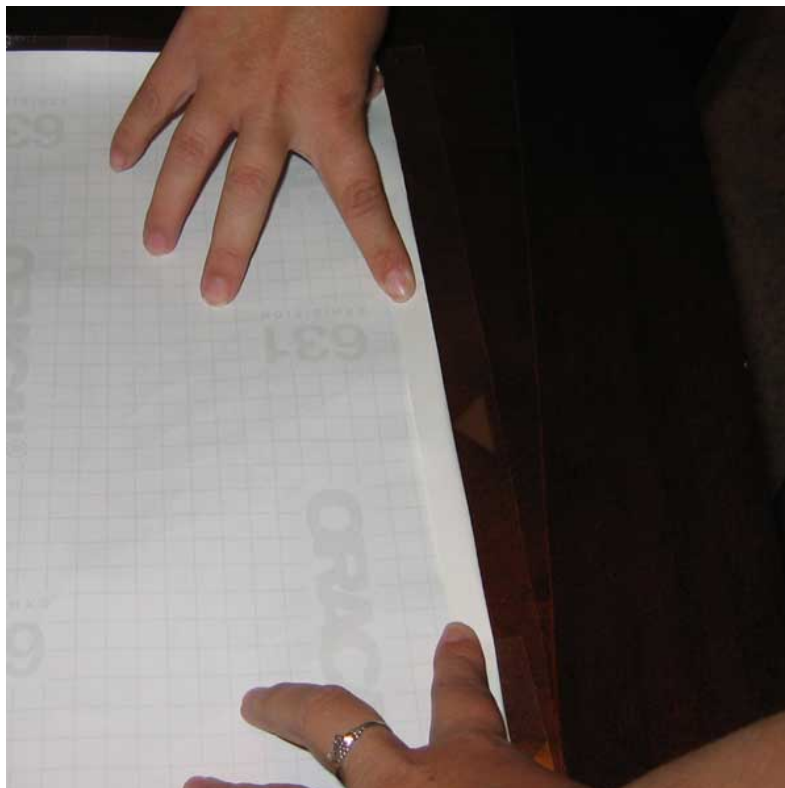

6. Once your backing has been pulled away from behind the triangles, you can now line them up with the alignment guide created back in step 3. You will use the top horizontal edge of the triangle, and line that up with the guide on the wall



7. Once it's aligned, then you can start to press the vinyl and transfer tape to the wall surface.



## [HANGING VINYL ON WALL SURFACE]

- Carefully, peel away the backing, at the same time, carefully pressing your vinyl to the surface, using a smooth even pressure of your hand or burnishing tool.



- Keep working the backing off the project, applying the vinyl to your surface. Work out any bubbles and wrinkles, slowly as you go along.






10. Once you have worked away all of the backing, then you will need to use your tool to burnish the project to your surface. Similar to putting a rub-on transfer onto a surface. For this project, I used my Chizzell it, but you can use a bone folder, paint scraper, credit card, or any other plastic type tool.



11. Make sure you have completely covered the full surface, rubbing well, and paying particular attention to the ends of each piece. It's important that you take your time during this process, so that when you remove the transfer tape, you will have less problems.

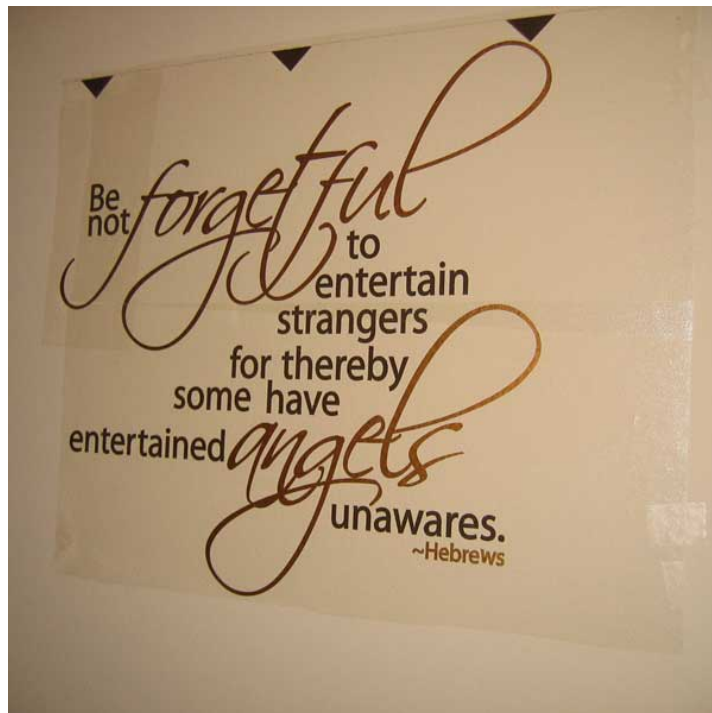

12. Once you have carefully burnished the whole piece, then you will start to peel away the transfer tape from the wall, leaving behind your vinyl.



13. As you peel away the transfer tape, if you have any spots where the letters/image starts to peel with it and not stick to the wall, simply slip your burnishing tool underneath, and burnish that part some more.



14. I find it helpful to fold over your transfer tape as you are doing it, sticking the edges together. IF you want to recycle the transfer tape, you don't want to do this, but I find, it's much easier to stick it together, and the cost of the transfer tape is minimal enough to not warrant the need to recycle. (It's a personal preference.)



15. Once you have peeled it away completely, then you will need to remove your alignment triangles from the wall. Since they are freshly applied, you should be able to peel them up with ease.



16. Take your eraser, and lightly erase your pencil alignment markings from the wall.



17. Go over the surface again, over any spots that might have bubbled up, or that doesn't look as if it has adhered all the way. Do this gently, so as not to tear or rip any of it. Once completed, your vinyl should look as if it was painted on! For the example in this tutorial, I used the Wall Decal Vinyl colors Brown (80) and Copper (92).



## [HANGING VINYL ON WALL SURFACE]

